

Settings	Description
General	Set the inactivity timeout (in minutes) after which the web console user is automatically logged out.
Management Interface DHCP Relay	Enable DHCP relay to allow LAN side DHCP clients of the appliance to obtain IP address from a remote DHCP server. Specify the DHCP Server IP address.
DNS	Specify the IP address of the primary and secondary DNS.
NTP	Specify the NTP server Host name to synchronize time.
Timezone	Configure the local time zone for the appliances.
User Authentication	Enable user authentication through a RADIUS server or a TACACS+ server.
FTP Server	Configure an external FTP server for uploading files from an appliance.
Notification Settings	<p>Configure external notifications about events generated on the appliances.</p> <ul style="list-style-type: none"> • Email Settings: Specify the destination email server for receiving event notifications. • SMTP Authentication: Specify and enable Simple Mail Transfer Protocol (SMTP) for sending email notifications. • Syslog Settings: Specify destination Server to forward syslog messages generated by the event/notification system. • SNMP: Configure SNMP V1/V2 agent and traps settings to forward events gathered by the appliance to an external SNMP management system. • SNMPV3- Configure SNMP V3 agent and traps settings to forward events gathered by the appliance to an external SNMP management system. • Notification Configuration: Configure filters for events to generate email alerts, syslog messages, and SNMP traps. • HD Error Monitoring (S.M.A.R.T): This option is enabled when a notification is configured for hard disk. Set the Hard Disk (HD) Error Monitoring test time and frequency. This runs a brief test of your hard disk on a daily or weekly basis and sends an email notification listing any errors encountered.

Settings	Description
Netflow	Configure an external Netflow server to receive Netflow counts.
AppFlow	Configure relay of ApFlow counters to an external Appflow collector. You can configure NetScaler MAS as an AppFlow collector. For more information see, Adding NetScaler SD-WAN SE/EE Instances in NetScaler MAS .
Default Admin Password	Configure the admin password.
License Configuration	Configure the remote license server settings for the appliances.
Custom Login Message	Add a custom message that will be displayed on the appliance login page.